

Copyright (c) 2023 Dogwood Valley Press, LLC

***** Pressure Level measurement conversion *****

Additional internal memory:
None needed

Equation to convert PT101_Raw into the pressure in PSI:
 $PT101+PSI = (PT101_Raw/100.0) * (100.0 - 15.0) + 15.0$

Current pressure in
PSI

CPT	
Compute	
Dest	PT101_PSI 25.0
Expression	((PT101_Raw)/100.0)*(45-0)+0

0

(End)