



Use Run to drive IN-MOTOR
since on in all steps
Raise-Tmr must be retentive