

Copyright (c) 2023 Dogwood Valley Press, LLC

-----

\*\*\*\*\* Pressure Level measurement conversion \*\*\*\*\*

Additional internal memory:  
None needed

Equation to convert PT101\_Raw into the pressure in PSI:  
 $PT101+PSI = (PT101\_Raw/100.0) * (100.0 - 15.0) + 15.0$

0

(End)

Current pressure in PSI	
CPT	
Dest	PT101_PSI 25.0
Expression	((PT101_Raw)/100.0)*(45-0)+0