

Copyright (c) 2011-2023 Dogwood Valley Press, LLC

Drilling Station Control

Additional internal memory:

Tag	Data Type	
Run	BOOL	On while station running
Int_Reset	BOOL	Internal reset
Step_1 to Step_10	BOOL	Step-in-progress bits
Unclamp_Tmr	TIMER	Times unclamp of part carrier

Start/stop and initial start. During reset, prevent start









