

Copyright (c) 2011 Dogwood Valley Press, LLC. Copying and posting without permission strictly prohibited.

Drilling Station Control

Additional internal variable declarations:
 Variables Run Int_Reset %M2 %M1 BOOL Data Type On while station running
 Step_1 to Step_9 %T1 to %T10 BOOL Internal reset Step-in-progress bits
 Unclamp_Tmr TON Times unclamping
 Start/stop and initial start. During reset prevent start.





