



<b>WARNING HORNS</b> ON (R) MANUAL OFF	<b>SOURCE FEEDER</b> UNL RECL	<b>OPERATION MODE</b> AUTO OFF MAN	<b>SYSTEM AUTO CONTROL</b> PURGE/STOP START/RESTART	<b>SYSTEM STATUS</b> READY (R) PURGING (R)	<b>EMERGENCY STOP</b> PULL TO RESET
--	----------------------------------	---------------------------------------	--	--	--

Operator Panel Graphic Coal Handling PLC Control	3	KTE	6-15-00	As built and tested
	2	KTE	1-17-00	Revised ECO #001-071
	1	JAL	12-04-99	Revised and updated
	0	JAL	11-16-99	Initial release
	No Scale			E-001-EW-5005-3