


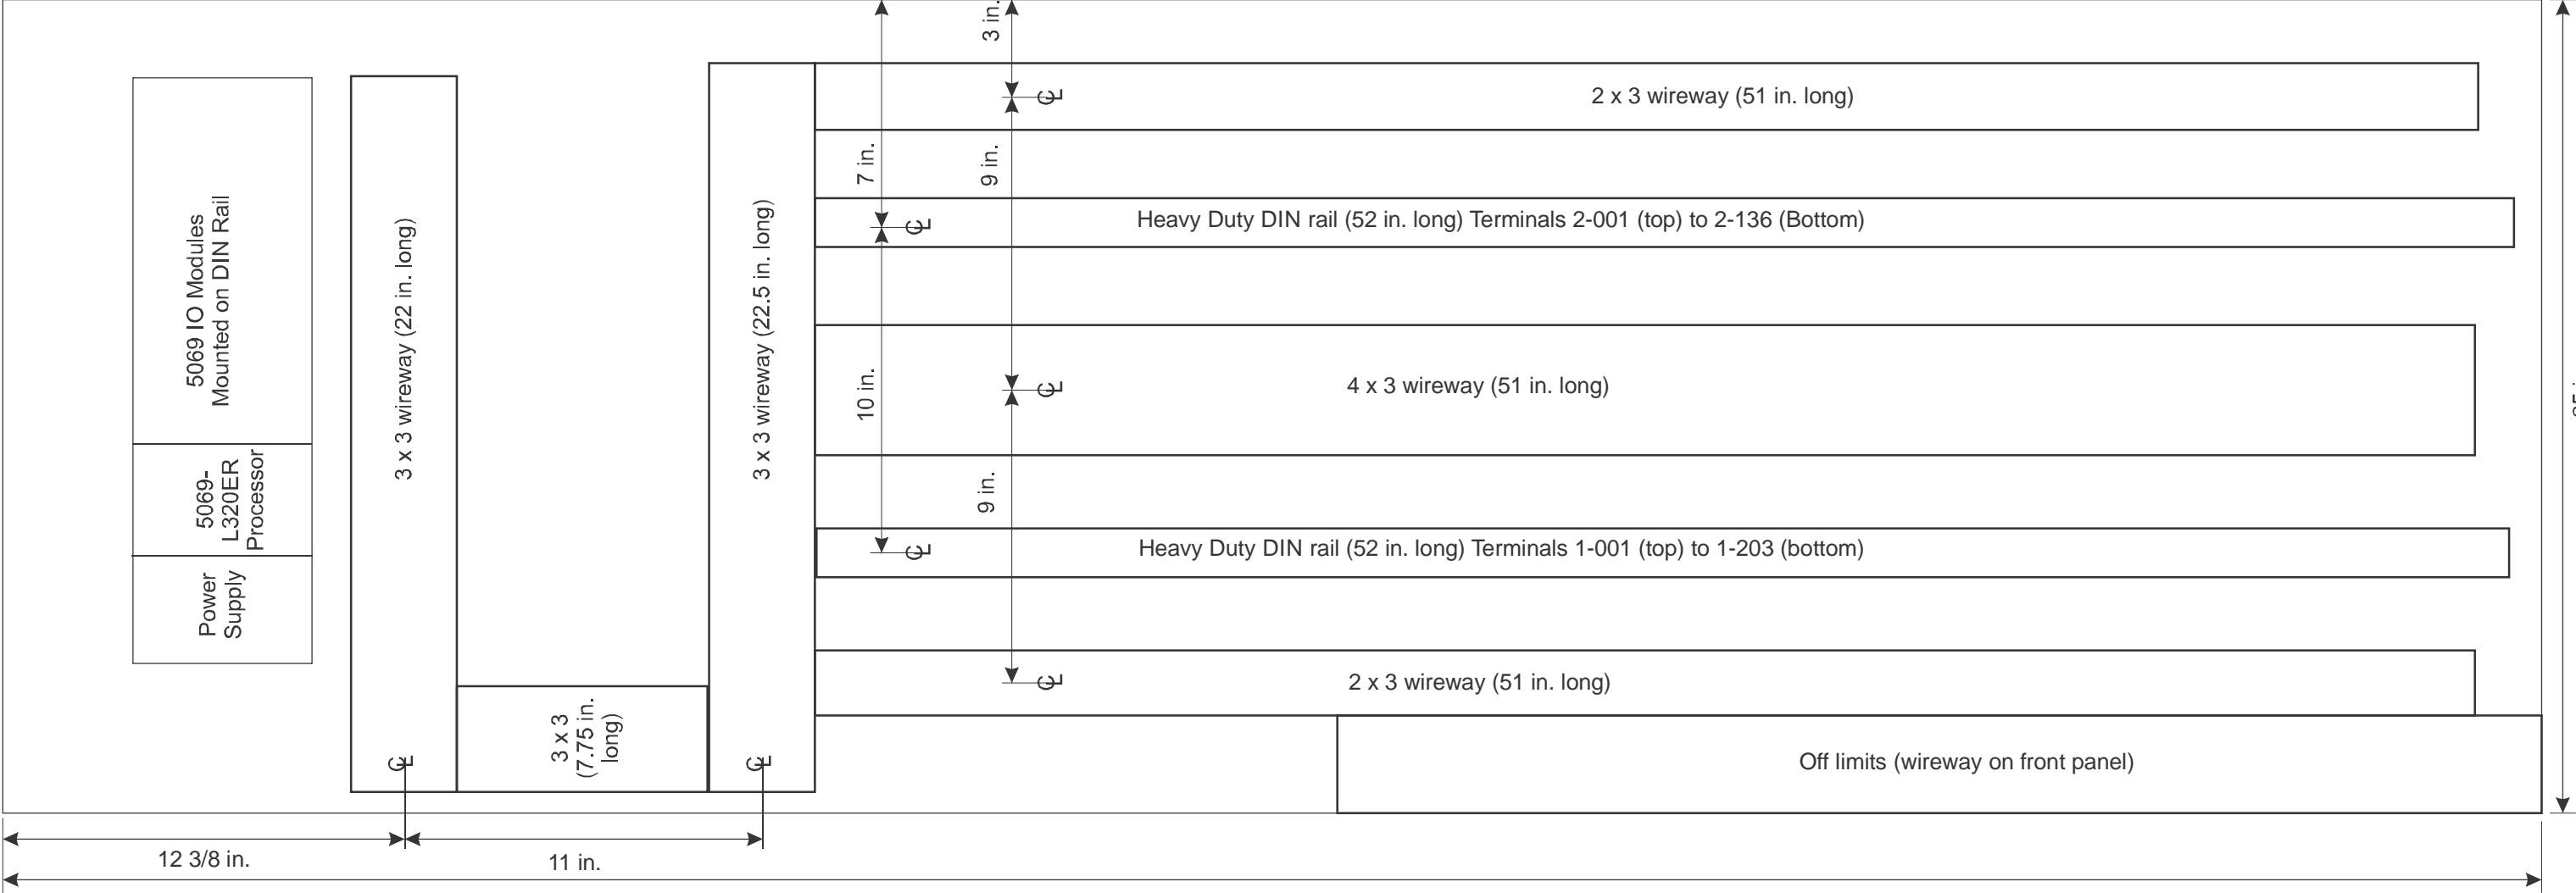




Top of panel

Note: Chassis must be grounded
per installation instructions for
the SLC 500 Modular Chassis
(p. 6 of pub. 1756-5.8)

Right panel



System Panel Layout Right Side Coal Handling PLC Control		KTE	6-24-23	Revised for CompactLogix
		KTE	6-15-00	As built and tested
		KTE	1-17-00	Revised ECO #001-071
		JAL	12-04-99	Revised and updated
		JAL	11-16-99	Initial release
		Scale: 1"=5"		E-001-EW-5006-4